

: Working Pressure means Inflation pressure which is the required pressure to inflate the plug by air.

: Back Pressure refers to the pressure which pushes the plug and forces it to move inside the pipeline.



Drawing Name : Model CP4001000